





ilinox

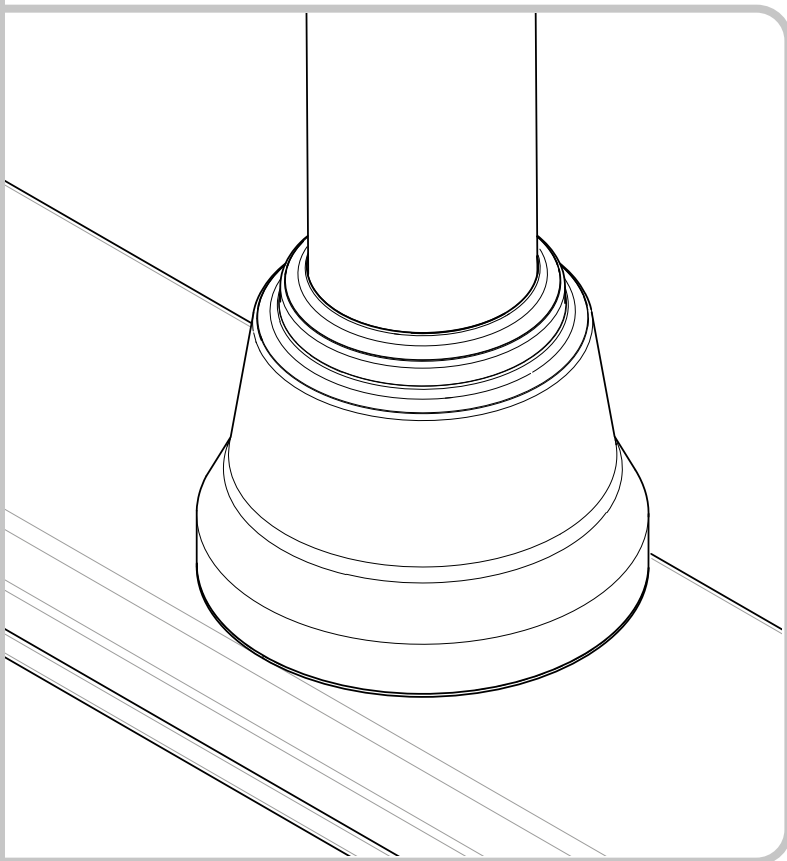


GCSA *ISTRUZIONI DI MONTAGGIO* *ASSEMBLY INSTRUCTIONS*

REV. 01 - 17/05/2021

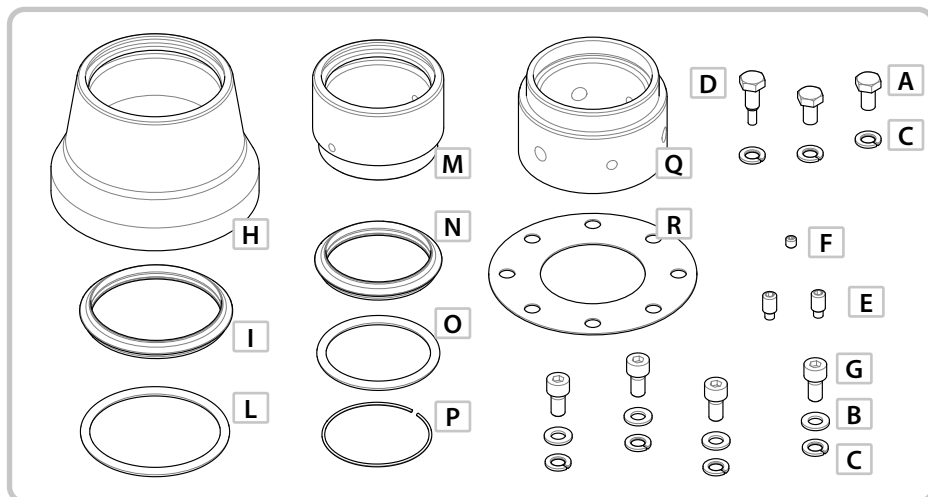


KIT DI MONTAGGIO
ASSEMBLY KIT

Q.TÀ QUANTITY	CODICE ILINOX ILINOX CODE	NORMATIVA RULES
2	VTE0815I - (A)	VITE TESTA ESAGONALE M8x15
4	RP0817I - (B)	RONDELLA PIANA VITE M8
7	RS0814I - (C)	RONDELLA SPACCATA x M8 D=14 INOX UNI 1751
1	VSP0814 - (D)	VITE SPECIALE M8x14 CON STELO
2	VSTEIP0816I - (E)	VITE S/TESTA ESAG.INC.M8x16 INOX DIN.915
1	VSTEIP0606I - (F)	VITE S/TESTA ES. INC. PIANA M6x6 DIN.913
4	VTCEI0816I - (G)	VITE TESTA CIL. ESAG. INC. M8x16

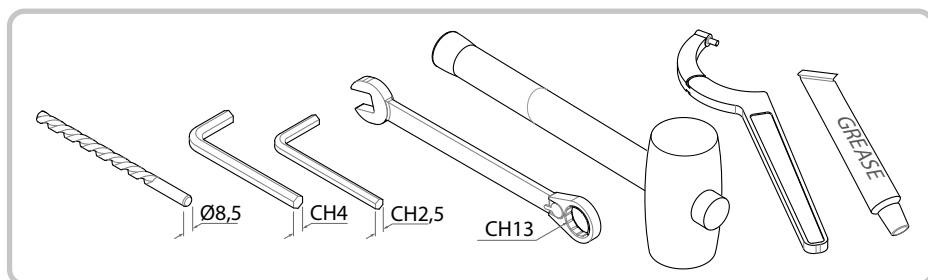


STRUMENTI
TOOLS


TAGLIO DEL TUBO
TUBE CUTTING

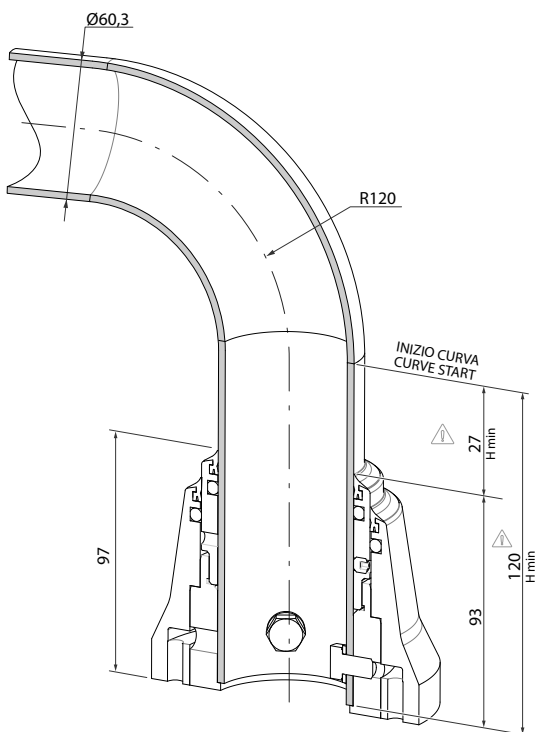



DIMA DI FORATURA
DRILLING FORM


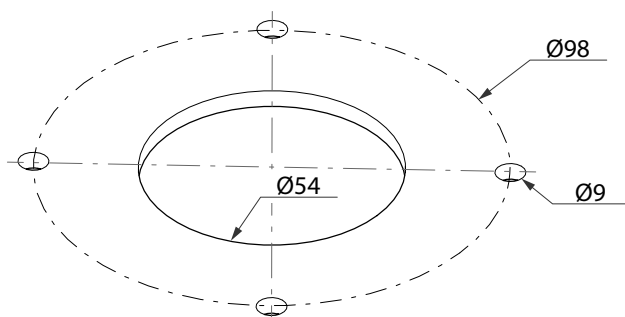



MONTAGGIO
ASSEMBLY

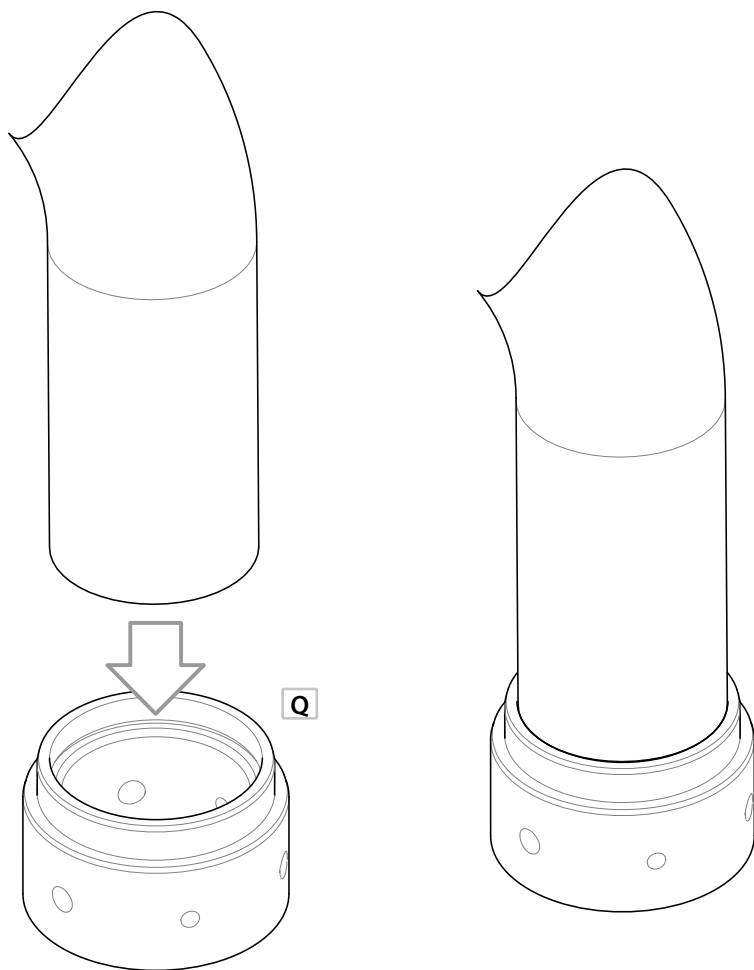




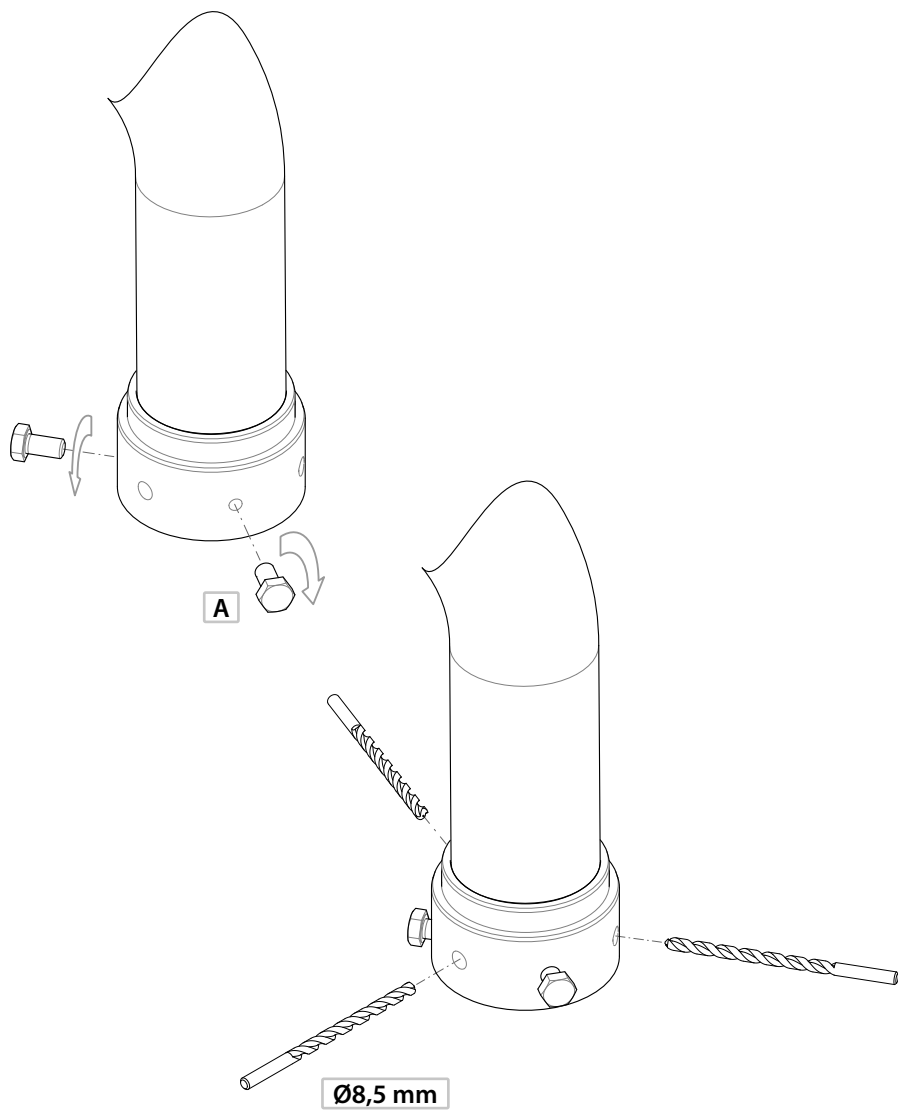


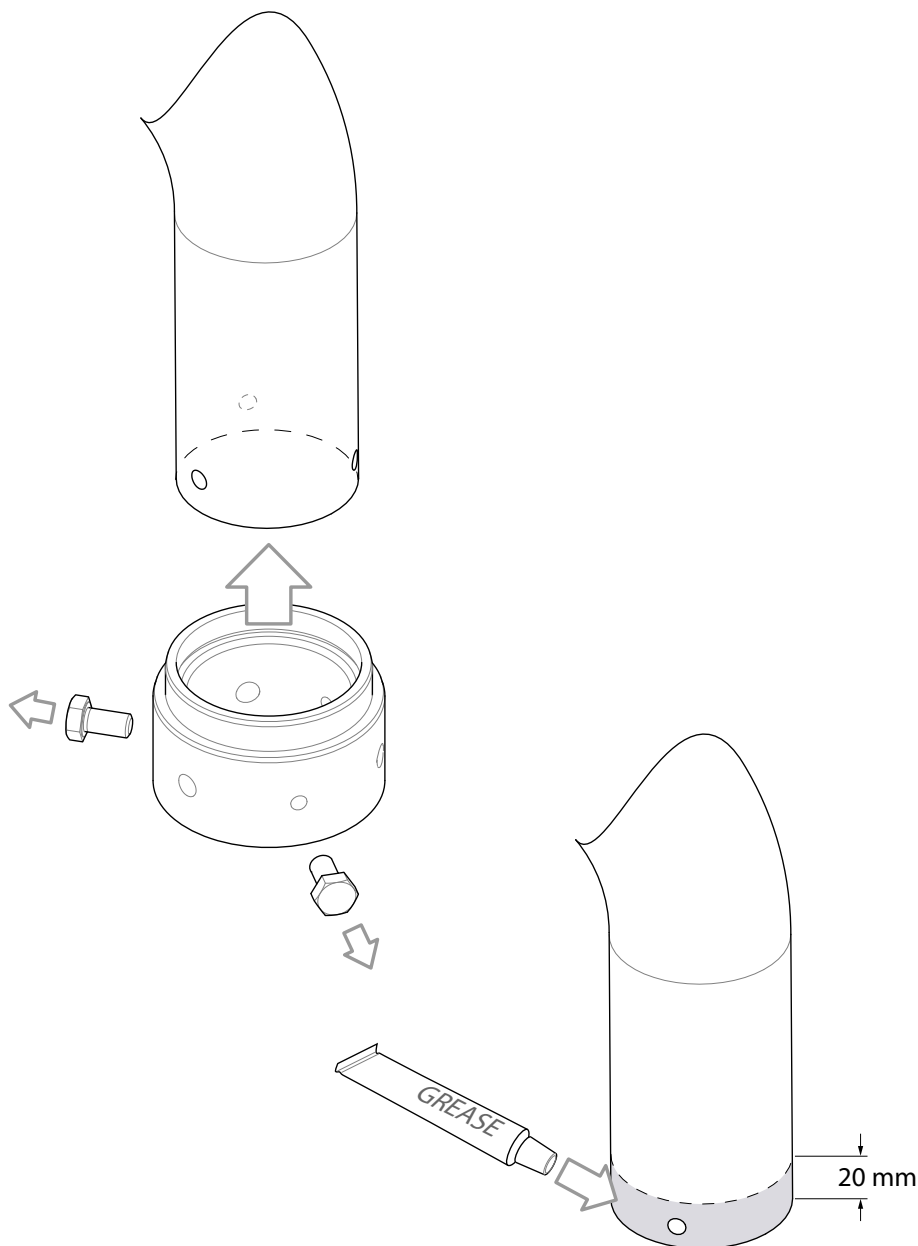

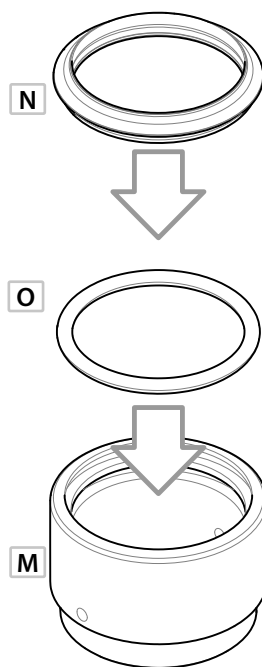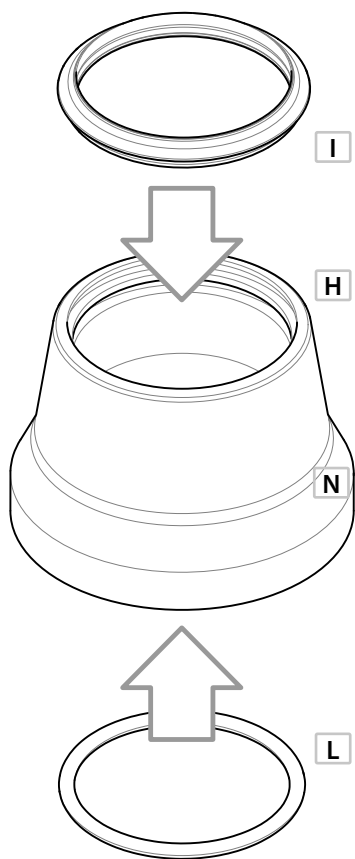


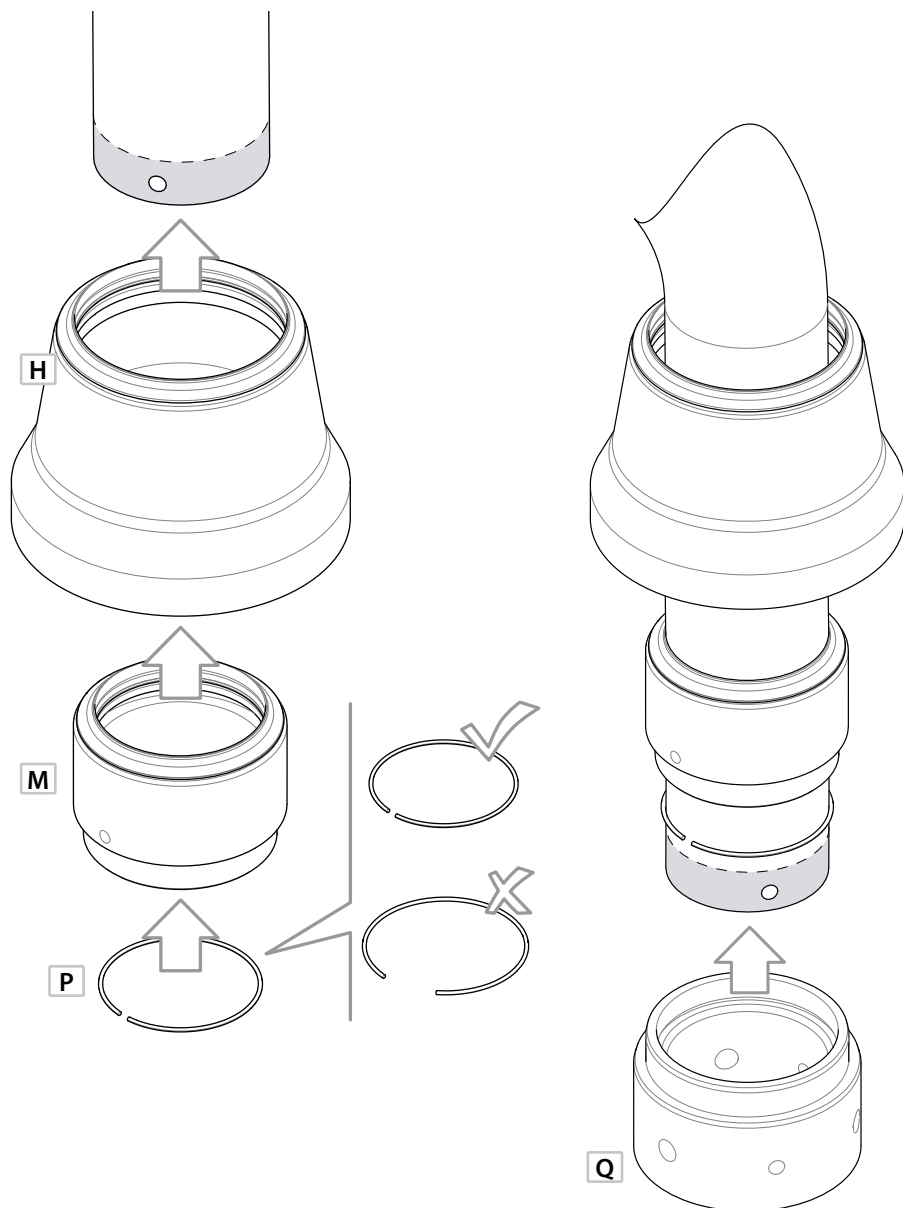



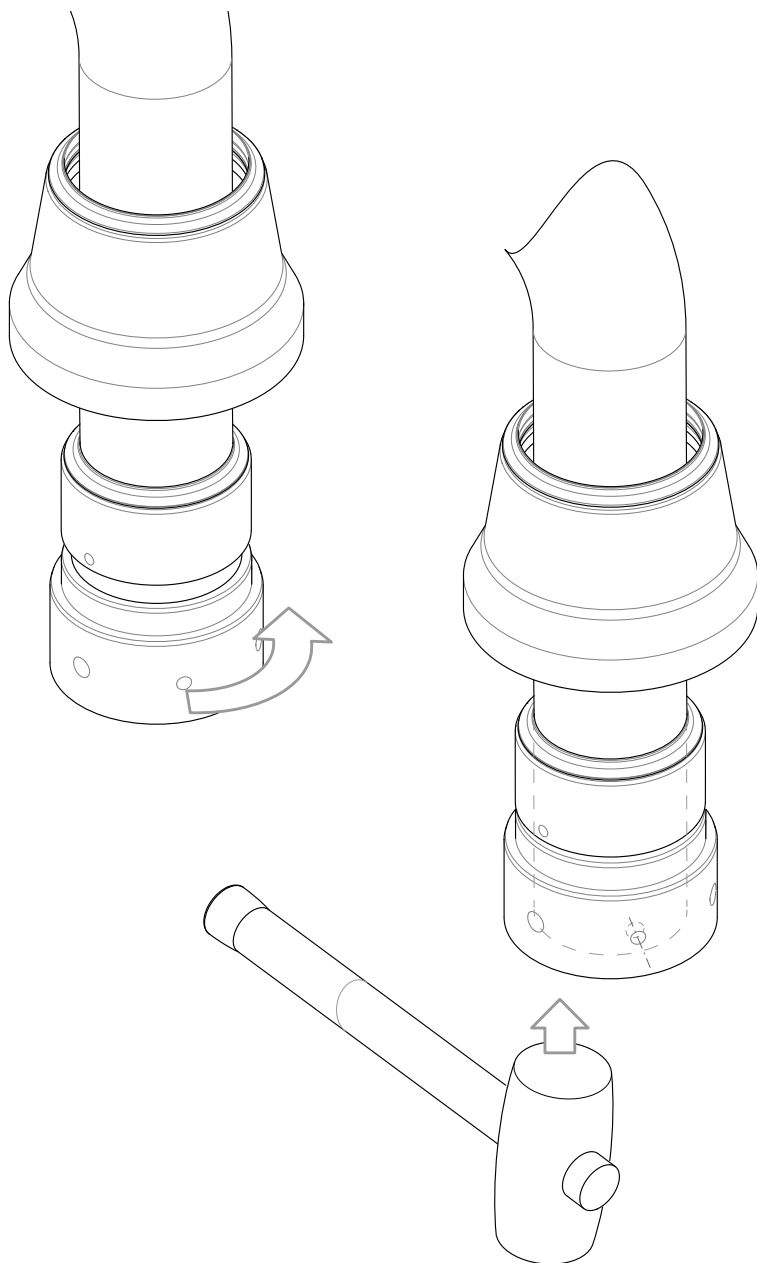


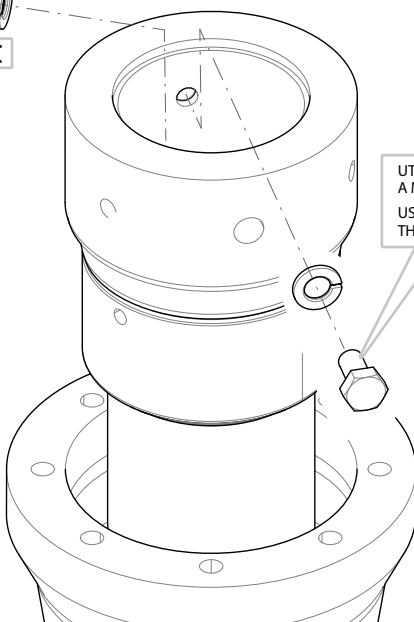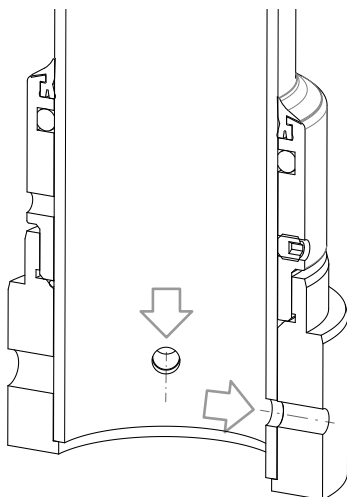


UTILIZZARE UN FRENAFILETTI
A MEDIA TENUTA
USE A MEDIUM STRENGTH
THREAD LOCKER



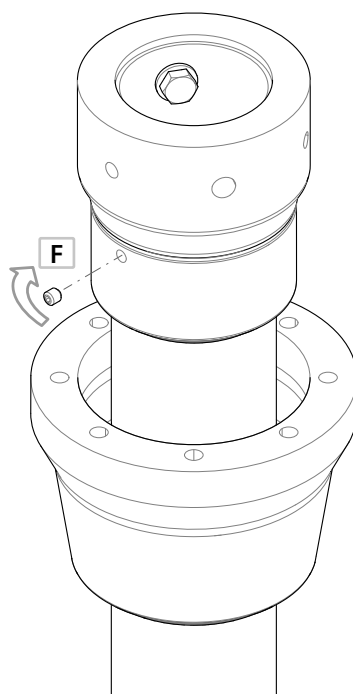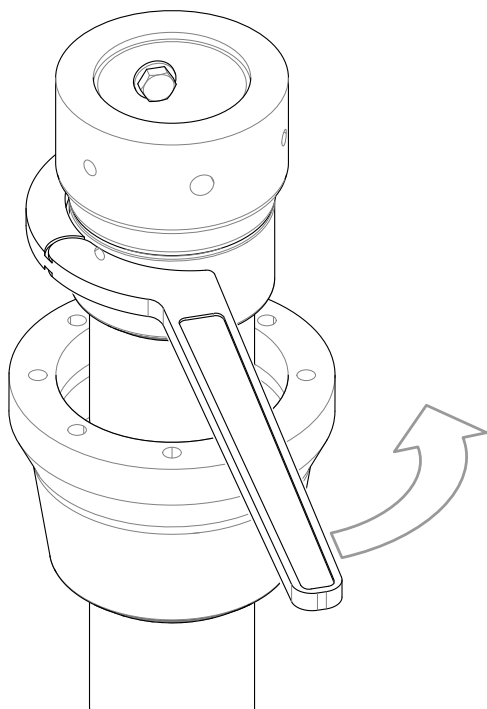

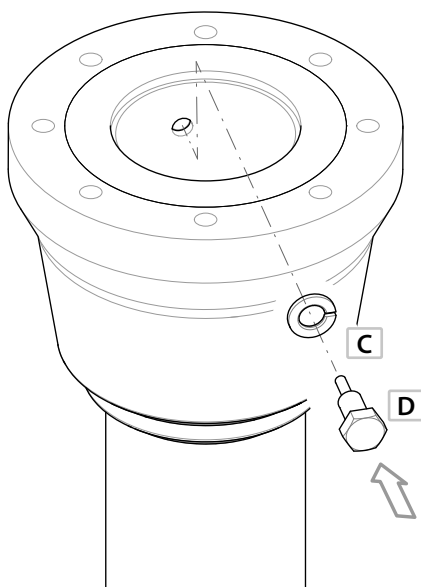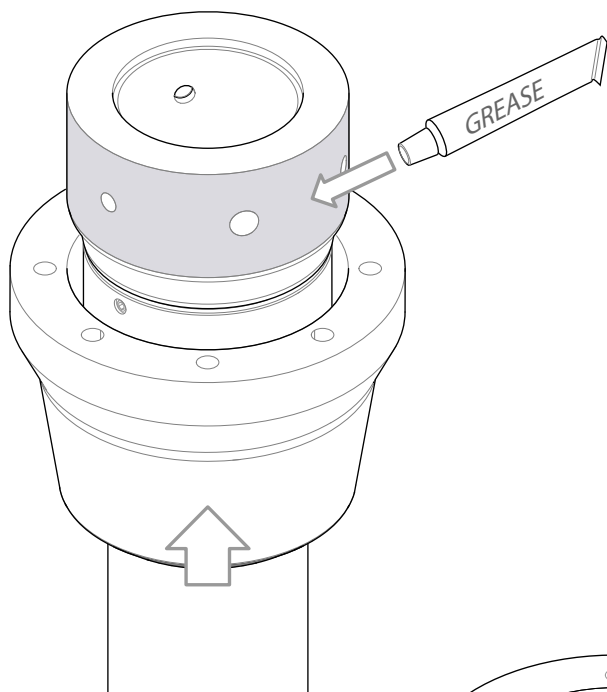

REGOLAZIONE ROTAZIONE
ROTATION ADJUSTMENT

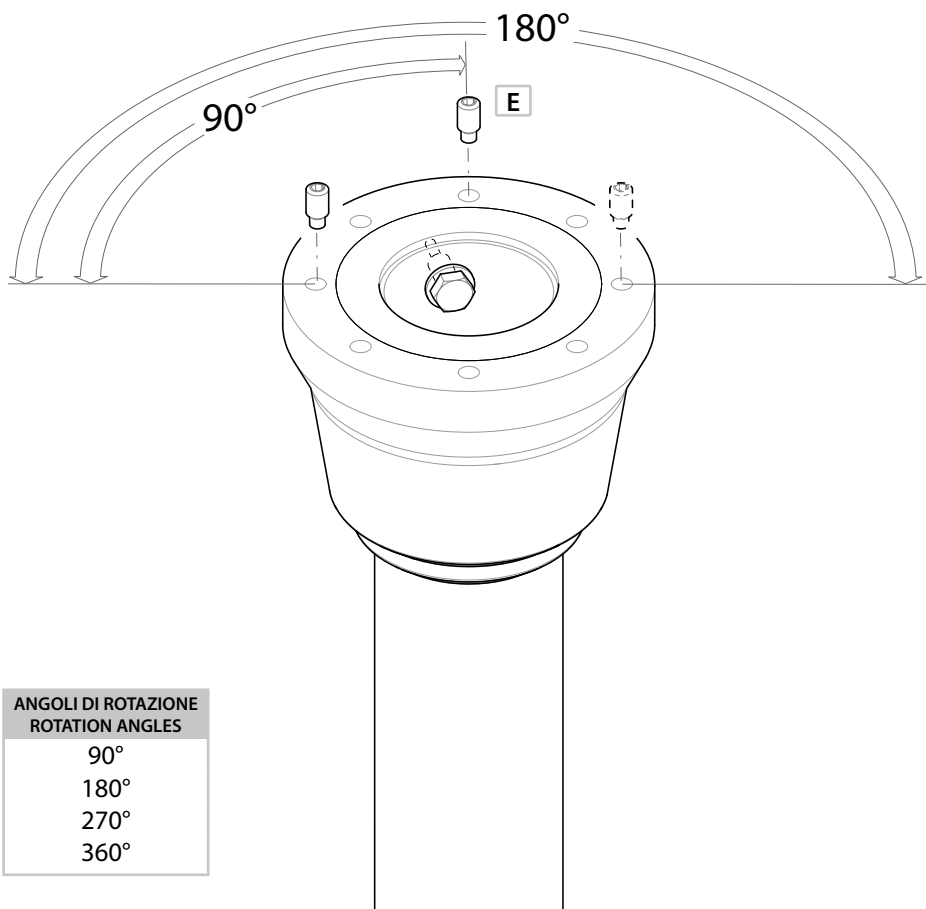

MONTAGGIO FINALE
FINAL ASSEMBLY

