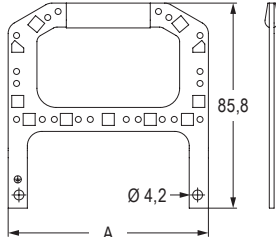
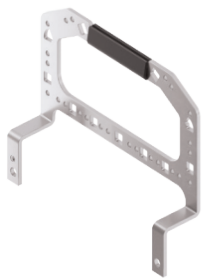
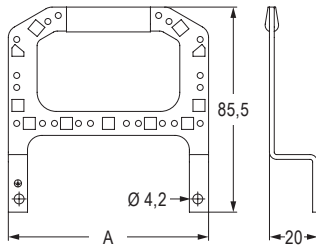
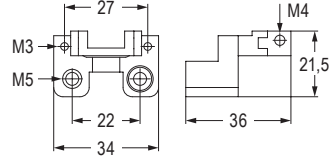

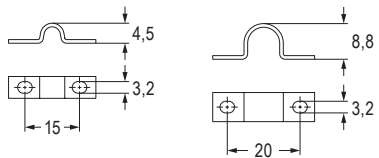


CR SS

Cable anchorages

size **77.27 – 104.27**

Item	Description	Part No.	Dimension
	Cable anchorages shield, for: inserts size 77.27 – MIXO frames, 4 mod. units inserts size 104.27 – MIXO frames, 6 mod. units Cannot be used with CT, CTS and CTSE inserts CR ... SS anchorages (with grip to facilitate connector disconnection) are used for earth connecting of several conductors and/or of the screen of shielded cables. For use with CR SP supports, see note below this page.	CR 16 SS CR 24 SS	 Part No. A (mm) CR 16 SS 83,5 CR 24 SS 110
	Anchorage for cables outside enclosures, for: inserts size 77.27 – MIXO frames, 4 mod. units inserts size 104.27 – MIXO frames, 6 mod. units Cannot be used with CT, CTS and CTSE inserts CR ... SS anchorages (with grip to facilitate connector disconnection) are used for earth connecting of several conductors and/or of the screen of shielded cables. For use with CR SP supports, see note below this page.	CR 16 SSD CR 24 SSD	 Part No. A (mm) CR 16 SSD 83,5 CR 24 SSD 110
	Supports, for grip panels of cables outside enclosure, 2 pcs. Equipped with fixing screws and washers for earth connection	CR SP	
	Short screws in zinc iron, 2 pcs. Long screws in zinc iron, 2 pcs.	CR 26 V CR 42 V	
	Clamp for shielding cables Ø 5 mm Clamp for shielding cables Ø 10 mm To be mounted on CR ... SS earthing terminals	CR 05 CA CR 10 CA	

Materials

Anchorage	zinc plated steel
Supports	die-cast zinc

Inserts

	Pages
Standard inserts, sizes 77.27 and 104.27	B.40-171
HNM inserts, sizes 77.27 and 104.27	H.12-32

Accessories

	Pages
4- and 6-slot sized frames for modular units	C.95
4- and 6-slot sized frames for HNM modular units	H.62

In the fixed part, a pair of **CR SP** supports is fitted on the connector insert, using the insert's fixing screws. A **CR ... SS/SSD** anchorage is then fitted on the **CR SP** supports, using the supplied fixing screws and washers. All parts are secured on the rear panel with a pair of **CR 26 V** special short screws.

In the mobile part too, a pair of **CR SP** supports are fitted on the connector insert and a **CR ... SS/SSD** anchorage is secured on it. A pair of **CR 42 V** long screws fasten the free part to the fixed part.

By unscrewing the **CR 26 V** special short screws, the whole assembly (free part and fixed part) can be removed from the panel for inspection.